





# Electrical connections

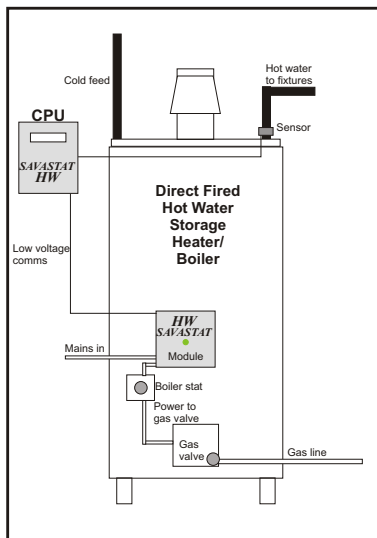

## Schematic of system integration

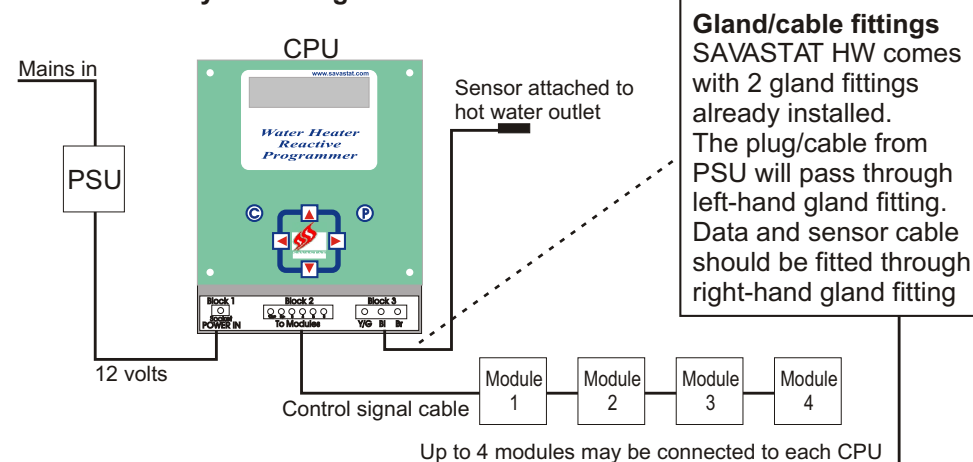

Each CPU has to be configured for number of boilers/modules. Place jumper as follows - Jumper not installed (factory default) 1 module. Position 1 (far left) 2 modules. Position 2 (middle) 3 modules. Position 3 (far right) 4 modules.

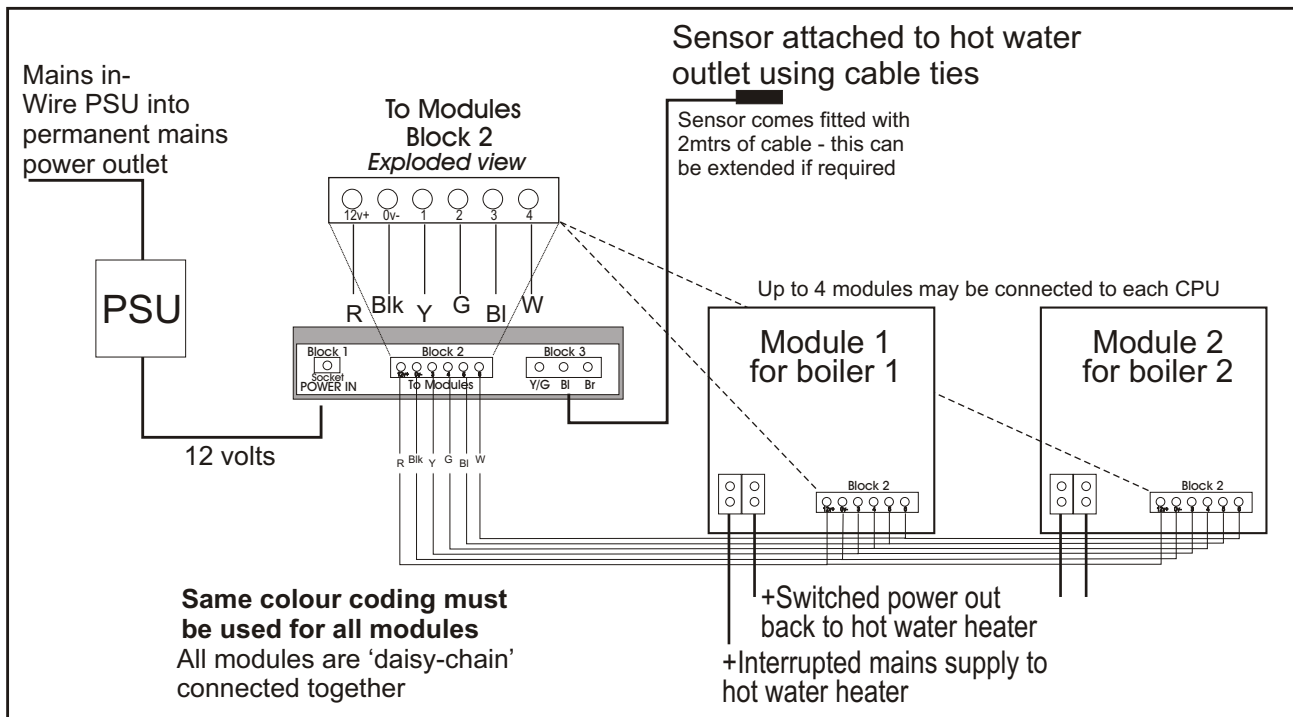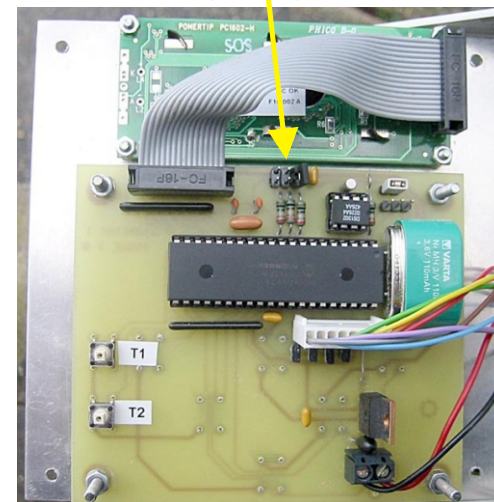

Each module has to be configured for it's position in order. Place jumper to suit each module i.e. Position 1 for module1 (default setting) Position 2 for boiler/module 2 etc.

